

**INSTRUCTIONS FOR THE USE & MAINTENANCE  
OF THE WALL JACK MODEL #10150**

**CAPACITY**

The Wall Jack, when used in conjunction with poles made of 2" x 4"s measuring 1 1/2" x 3 1/2" of clear straight grained fir wood, free from all knots or defects, has the capacity of 1000 lbs.

**USE**

- (1) To operate, simply slide the Wall Jack over the pole, allowing the pole to slide through the top and bottom grippers and then allowing the pole to rest behind the bottom roller guide.
- (2) Move the handle in an up and down motion, allowing the Wall Jack to climb the pole.
- (3) When in use, always stand behind the Wall Jack and pole, and never under the wall or beam being raised.

**CARE AND MAINTENANCE**

- (1) Inspect all Wall Jack equipment, including the Wall Jack pole, before and after each use to be sure that there is no damage or deformation to any of the equipment.
- (2) Inspect the Wall Jack to be sure there is no deterioration as a result of rusting. Discard if necessary.
- (3) Always handle the Wall Jack and pole with care to ensure safe and lasting use.
- (4) Pay special attention to your pole. It is necessary that the pole be in good condition at all times. If any splitting or deterioration of the pole takes place, discard at once.
- (5) Do not drop or throw any Wall Jack from a building or throw onto a truck.
- (6) Do not use the Wall Jack equipment if it has been exposed to extreme heat or cold.
- (7) Do not use if pole is wet or frozen.
- (8) This product must be used in strict compliance with Local, State and Federal OSHA Regulations. Be safety conscious.